

www.inkjetbiz.com orders@graphicsone.com (408) 394 7493

XPress 2432 User Manual



NOTICE

- 1. Use the heat transfer press only as intended
- 2. Please keep children away from the heat press
- 3. Use the correct power outlet before plugging in the device
- 4. Burns can occur from contact with the hot surface
- 5. Please hold the handle firmly when machine is opening
- 6. Turn off the device when not in use and remove the power plug





•	In the Box	03
•	Product Features Display	04
•	Settings Transfer	05/06
•	Parameters	07
•	Troubleshooting	08

MACHINE INTRODUCTION




In the box

1 x XPress 2432

1 x Power Cable

* Platen size 23.6" x 31.5"

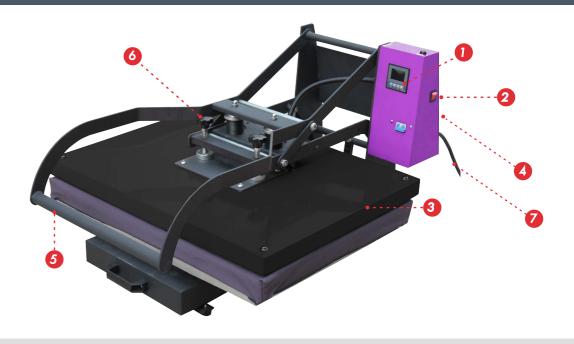

1. Control Display

2. Power Switch

3. Heating Plate

4. Fuse

5. Handle Grip

6. Pressure Knob

7. Power Cord

CONTROLLER PROGRAM

CONTROL SETTING











: Timing in Seconds









Decrease Digits (Long hold for temperature calibration)







Control Panel Display



P-3:°C or °F Read-out Touch SET & ↑↓ buttons to set °C or °F



Auto-off Introduction It reads OFF and machine starts to cool down after the set time and turns off.



P-1: Temp. Setting Mode Touch SET & ↑ ↓ buttons to set desired Temp.



P-3:°C or °F Read-out Touch SET & ↑ ↓ buttons to set °C or °F



Wake Machine from Sleep Mode You can wake up the heat press from sleep mode by touching any button on the control panel, and the machine will heat again.



P-2: Time Setting Mode Touch SET & ↑ ↓ buttons to set desired time.



P-4: Auto Power-off Mode Touch SET & ↑ ↓ buttons to set auto-off time with 0-120 mins range



Clear Counter NO. You can long hold the CLEAR button to clear the COUNTER NO, on the panel,

Transfer Parameters

TRANSFERS	PRINTHEAD	MARK	TEMP.	TIME	PRESSURE
SubliMate Paper	TFP, DX	Polyester Fabric	392°F	35sec.	Low to Medium
Fuze Fabric	TFP, DX	Cotton	365°F	70 sec.	Low to Medium

For any further help, please contact our support team.

support@inkjetbiz.com (408) 394-7595

Troubleshooting

- I Q:When pressed onto the garments, the color of the design is faded, or transfers are not fully stacked onto the garments.
- A: Reason comes from three points, the pressure is no enough, the temperature is not hot enough or the design has not been pressed for enough time. You may need to try more to get right temp, time and pressure.
- Q:Machine is still off when power switch is on
- A: Power connector is loose or fuse broken
- Q: Pressure knob is hard to adjust
- A: Add lubricating oil into screw connection, this should make the operation smoother.
- Q: LCD control panel shows "000".
- A: That refers the thermocouple wire is disconnected, you shall turn to support team for help and replace the disconnected connection.
- **Q**: How to get a reasonable pressure.
- A: Adjust the pressure by turning the knob and locking down the handle. There should be a larger resistant force afterwards.
- I Q: Turn on the power, but the heat press does not work.
- A: Pls check the power plug connected well to the socket, you may turn to support team if problem is still remaining.