

Fuze™ Sublimation T-Shirts

100% Sublimatable Cotton Garments

This bulletin describes the Step-by-Step Guide to Imaging Sublimation-Ready 100% Cotton **Fuze T-Shirts**

1. Preheat your **Heat Press** to 355° F for at least 30 seconds.



2. Place the **Fuze T-shirt** on the **Heat Press**.



3. Set your **Sublimation Printed Paper** face down on top of the **Fuze T-Shirt**.



Call Us at: (408) 394-7595 • www.inkjetbiz.com


4. Use **Clean Parchment Paper** on top of the printed sublimation paper, and then place a layer of **Polyester Fabric** over the **Parchment Paper**.



5. Press the **Fuze T-Shirt** with medium-high pressure for 65 seconds at 355° F



6. Once the **Fuze T-Shirt** is cold, peel it.

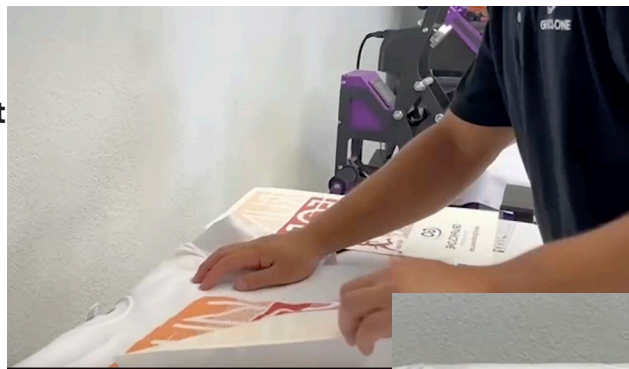

Your **Fuze T-Shirt** is ready to use.

Remember, the entire T-Shirt can be sublimated.

Washing Instructions: Please wash the T-Shirt inside out in Cold Water



For additional information please **contact us**.